

Presented by: A-Tech Instruments Ltd. sales@a-tech.ca; www.a-tech.ca Toronto: 416 754 7008, Montreal: 514 695 5147, Toll Free: 1 888 754 7008



High Precision Torque Sensor

for non-rotating applications

MODEL 8631

NEW







Highlights

- Measuring ranges from 0 ... 5 N·m up to 0 ... 200 N·m
- Linearity error from ≤0,1 % F.S.
- Standardized output signal
- Tare function, filter and average values configurable
- Extremely high, reliable axial load

Options

- Output signal ±10 V / USB
- With burster TEDS
- Dual-range model

Applications

- Test setups for precision mechanics
- Measuring reaction torques for motors
- Measuring car-seat adjustment torques
- Measuring operating torques for door release mechanisms

Description

This high-precision torque sensor is designed for both static and dynamic measurements on non-rotating parts. The 10mm diameter throughhole can be used to feed parts such as cables or Bowden cables through the sensor.

The mounting flanges contain threaded holes and through-holes so that the sensor can be fitted at either end. With no rotating parts, this sensor needs no maintenance when used correctly.

The modular design of this strain-gage sensor allows precise configuration for the desired application.

With the integrated amplifier option, the sensor directly supplies a voltage signal of $0 \dots \pm 10$ V that is proportional to the torque. The sensor can be configured via the micro-USB interface, providing access to, for example, a filter frequency setting, averaging, and a tare function. With the USB option, in addition to the voltage output, the measurement function is available via USB as well. The sensor comes with the DigiVision software for performing measurements and data archiving, with drivers additionally available e.g. for LabVIEW. Integration into custom software is possible via DLL. Examples can be found on our website www.burster.com

The burster TEDS option (electronic data sheet, memory chip with sensor-specific data) allows rapid configuration of compatible evaluation units (instrumentation amplifier, indicator, ...).




Technical Data

8631	-	5005- VXXXXX	5010- VXXXXX	5020- VXXXXX	5050- VXXXXX	5100- VXXXXX	5200- VXXXX
Measuring range calibrated in N·m							
from 0		±5	±10	±20	±50	±100	±200
				Higher measuring	ranges on request		
Accuracy	_						
Relative non-linearity					% F.S.		
Relative hysteresis			1		% F.S.	1	1
Maximum axial load	[N]	1000	1200	1400	2500	4500	7000
Maximum radial load	[N]	70	100	120	250	500	750
Spring constant	[N·m/rad]	677	1587	5735	16142	31133	13696
Mass moment of inertia measuring side	[10 ⁻⁶ kg*m²]	37	38	164	168	465	476
Electrical values wit	hout amp	olifier / USB					
Sensitivity				1 m	V/V		
Tolerance of sensitivity				0.1 9	% F.S.		
Bridge resistance (full bridge)				100	Ω 00		
Excitation voltage				5	V		
Max. excitation voltage				10) V		
Environmental cond	itions wit	thout amplifie	r / USB				
Range of operating and nominal temperature				-20 °C	. +80 °C		
Sensitivity of temperature effects					15 % F.S./K 10 % F.S./K		
Electrical values wit	h amplifi	er / USB					
Rated supply voltage range				5 30 V DC	or 5 V via USB)		
DC power consumption				ca.	1 W		
Output voltage at ± rated torque				±l	0 V		
Output resistance				<50	Ω 0(
Insulation resistance				zero (bindin	g capability)		
3 dB cut-off frequency				500	0 Hz		
Ripple				<50) mV		
Calibration signal				10.00) V DC		
Environmental cond	ition <u>s wi</u> t	th amplifier <u>/</u>	USB				
Range of operating and nominal temperature				-20 °C	. +60 °C		
Sensitivity of temperature effects:				nt zero 0.01 on final value 0.01	5 % F.S./K 0 % F.S./K		
Mechanical values							
Dynamic overload safe				up to 70 % from	m nominal value		
Max. operation torque				150 % of no	ominal torque		
Breakaway torque					minal torque		
Alternating load					minal torque		
Other		5005	5010	5020	5050	5100	5200
Material:				Housing: made of			
Protection class				acc. EN 6	0529, IP40		
Weight	[g]	4	00	930	950	1700	1750



Geometrie								
8631	-	5005- VXXXXX	5010- VXXXXX	5020- VXXXXX	5050- VXXXXX	5100- VXXXXX	5200- VXXXXX	
L	[mm]	6	5	7	0	8	35	
D	[mm]	6	0	8	0	10	00	
А	[mm]	5	7	1	0	12		
Н	[mm]	72		8	6	105		
LK	[mm]	50		7	0	85		
ØB	[mm]	4.5 (4 × 90°)		5.5 (6	x 60°)	9.0 (6 x 60°)		
G	[mm]		M5	6 x	M5	6 x M8		
Mounting								
Mounting instructions		Do not exceed the Please refer to ou	e permitted axial o r operating instruc	and radial forces d tions for detailed in	uring fitting and op nformation www.b	peration (see techn urster.com.	ical data).	

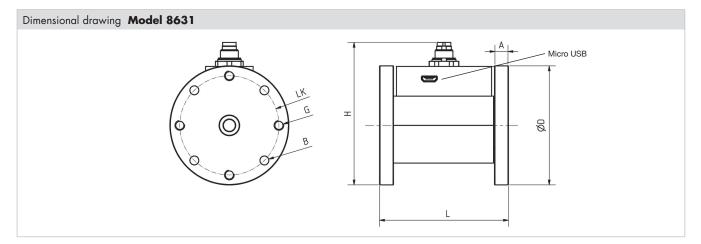

For detailed dimensions, you can find CAD data for the sensor on our website www.burster.com.

Electrical values

7-pin miniature connector, additionally micro-USB interface for configuration/measurement (Option, USB connection cable included)

Wiring Code depends on the options selecte	d
Pin	Assignment
1	Supply -
2	Supply +
3	Shield
4	Signal +
5	Signal -
6	TEDS GND (option) / calibration signal
7	TEDS I/0 (option) / NC



DigiVision configuration and analysis software

Features

- Can be used to actuate tare function, with value stored in sensor
- Configuration options for averaging and filters; value stored in sensor

DigiVision configuration and analysis software max. 200 measured

DigiVision configuration and analysis software including maths func-

value/s for one sensor (freely available on our website)

- Intuitive user interface
- Automatic sensor identification
- Sensor calibration data readout

DigiVision Light PC software

DigiVision Standard PC software

DigiVison configuration and analysis software

PC-Software DigiVision Professional

There is a series of the serie

USB measurement option

- Numerical & graphical display and measurement of the physical torque value
- Practical start and stop trigger functions
- 4 limits can be configured for each measurement channel
- MIN/MAX value acquisition
- Automatic scaling
- Measurement reports can be saved as Excel or PDF file
- Archive viewer for displaying sets of curves
- X Multichannel measurements, even with different sensors (e.g. 9206, 8631, 8661) available with standard version

up to 16 channels

tions; up to 32

Accessories

Order code	
9900-V594	Mating connection 7 pin
9900-V596	Mating connection 90°-angle
99594-000A-0150030	Connecting cable, length 3 m, other end free
99596-000A-0150030	Connecting cable, length 3 m, plug with 90°-angle, other end free
99141-594A-0150030	Connecting cable for burster desktop instruments with 12 pin socket, 3 m
99209-586C-0510030	For model 9235, model 7281 and model 9311
9900-K358	Micro USB cable, length 1.8 m
8631-P100	DigiVision Standard configuration and analysis software; up to 16 channels
8631-P200	DigiVision Professional with additional configurable maths channel; up to 32 channels
	DigiVision Light configuration and analysis software, max. 200 measured value/s for one sensor (freely available on our website)

Model 8630-P100

Model 8630-P200



Calibration

Manufacturer Calibration C	ertificate (WKS)
	Special calibration for clockwise or/and counter clockwise direction torque, in 20 % steps of range up and down.
DAkkS Calibration Certifica	te
	The DAkkS calibration certificate (in accordance with German Calibration Service DKD-R 6-1 guidelines, clockwise and/or anticlockwise torque) includes at least three measurement cycles in steps of 10% of the measurement range, rising and falling.

Order Code

Measuring Range					Co	de									
	0.	±5	Nm		5	0	0	5							
	0.	±10	Nm		5	0	1	0							
	0.	±20	Nm		5	0	2	0							
0 ±50 Nm					5	0	5	0							
	0.	±100	Nm		5	1	0	0							
	0.	±200	Nm		5	2	0	0					Standar	d	
											0	0	0	3	0
8	6	3	1	-	X	x	x	x	-	v		0		3	0
Star 2 rc 2 rc 2 rc 2 rc	dard se ndard se ange ser ange ser ange ser	ensor, o nsor 1:1(nsor 1:5 nsor 1:4	00	suring re	ange						0 1 2 3				
Star 2 rc 2 rc 2 rc	ndard se ange ser ange ser ange ser ut signe	ensor, o nsor 1:10 nsor 1:5 nsor 1:4 als	00			3					1 2		0		
 Star 2 rc 2 rc 2 rc 2 rc Output Out 	ndard se ange ser ange ser ange ser	ensor, o nsor 1:10 nsor 1:5 nsor 1:4 als age 10 N	00 / incl. co	onfigura	tion USE		asuring (JSB			1 2		0		
 Star 2 rc 2 rc 2 rc 2 rc 0 rc 	ndard se ange ser ange ser ange ser ut sign e put volte	ensor, o nsor 1:10 nsor 1:5 nsor 1:4 als age 10 \ age 10 \	00 / incl. cc / incl. U	onfigura SB conf	tion USE		asuring l	JSB			1 2		0 1 3		